


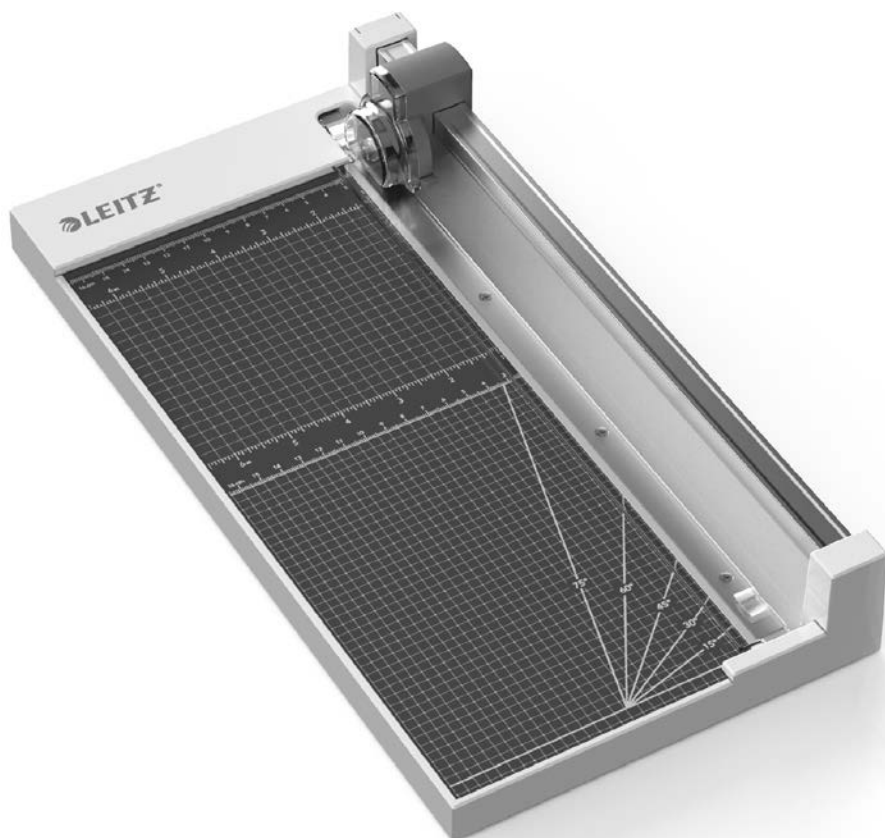


LEITZ PRECISION HOME OFFICE A4

TRIMMER / ROLLENSCHNEIDER



Instructions for use

EN	4	PT	11	FI	16	UK	21	HU	26
DE	5	NL	12	ET	17	RU	22	RO	27
FR	8	DA	13	LV	18	KK	23	GR	28
IT	9	NO	14	LT	19	CS	24	TR	29
ES	10	SV	15	PL	20	SK	25	AR	30

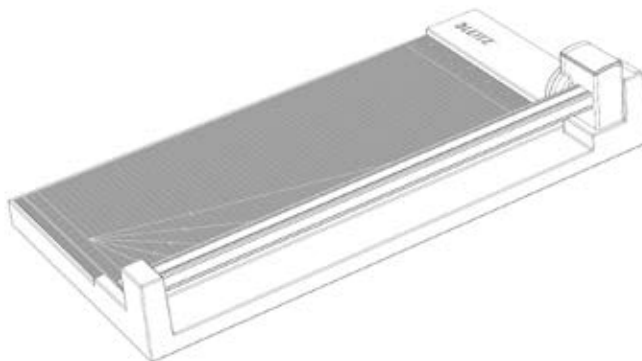

	Precision Home Office A4
Item / Artikel #	90260000
Sheet Capacity / Schnittleistung	10 x 80 gsm (1.0mm)
Cutting Length / Schnittlänge	A4 305mm



To register and activate your warranty go to
www.leitz.com/register

Um sich zu registrieren und die Garantie zu aktivieren gehe zu
www.leitz.com/register

Fig. 1

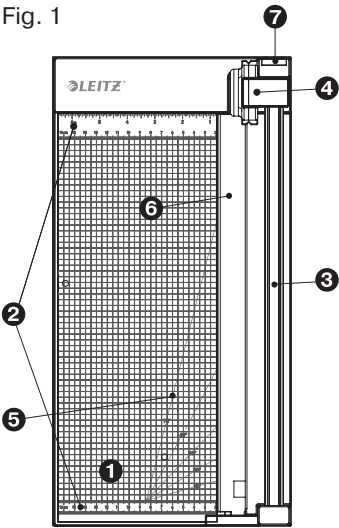


Fig. 2








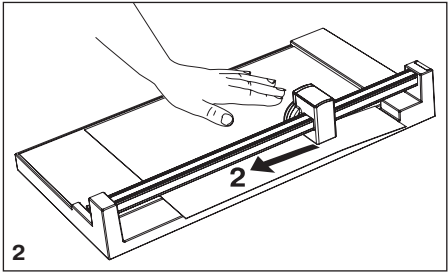


Fig. 3

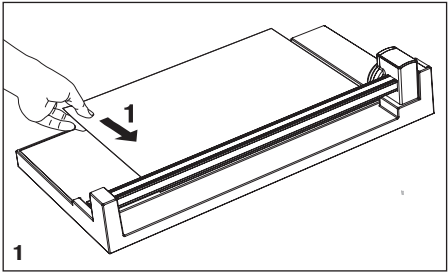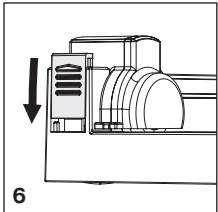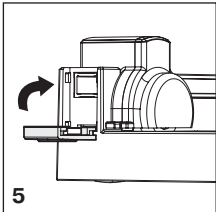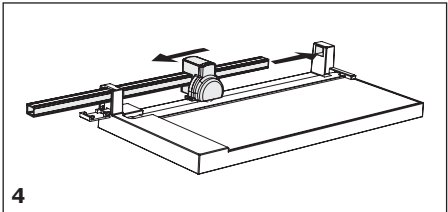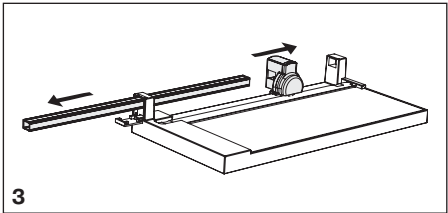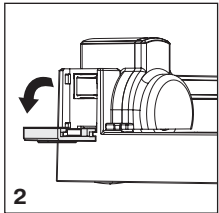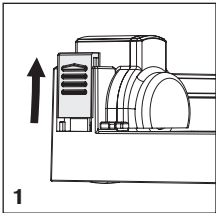

Key Features (see fig. 1)

1. Trimmer base with calibrated grid
2. Ruler
3. Cutter rail
4. Cutter head (in starting position)
5. Angle measures
6. Transparent paper guide
7. Cutter rail lock

Safety Instructions



CAUTION: To be used by adults or by children when under adult supervision



CAUTION: Sharp blade, take care when handling or changing the blade

NOTE: Please retain this information regarding safe operation of this paper trimmer

Operating Instructions (see fig. 2)

- Place the trimmer on a stable, flat surface such as a table.
 1. With the cutter head in its starting position, place the material to be trimmed under the transparent paper guide. Use the calibrated grid and ruler to ensure a precise cut.
 2. Hold the material securely in place with your left hand. With your right hand, apply firm pressure to the cutter head and pull it through the material.
- Do not carry the trimmer by holding onto the cutter rail or cutter head
- Remove staples, paper clips etc before cutting
- Do not cut metal film or film containing glass etc.
- Do not cut more sheets than the stated sheet capacity

Changing the Cutting Head (see fig. 3)

1. Pull the cutter rail lock up
2. Open the cutter lock
3. Slide the rail out and remove the old cutter head
4. Put a new cutter head onto the rail and slide back into position
5. Close the cutter lock
6. Press the lock down

Accessories

Replacement Cutter Head: Item 90300000

Maintenance

- Trimmers can be cleaned with a dry lint-free cloth
- Check the cutter head and cutter rail for a secure fit from time to time
- Do not attempt to service or repair the unit yourself